SHENZHEN MAGIC WHEEL TECHNOLOGY CO., LTD.

B708-A9, 7/F, Yousong Technology Building, No 108, Donghuan First Road, Songhe Community, Longhua District, Shenzhen, China

www.ausomride.com

support@ausomride.com

EC	REP	Lienco SAS 8 rue Marcel Cerdan, 77600, Bussy Email: ruoyu@lienco.eu Phone: 0033658628923

Made in China

AUSOM

L2 Max

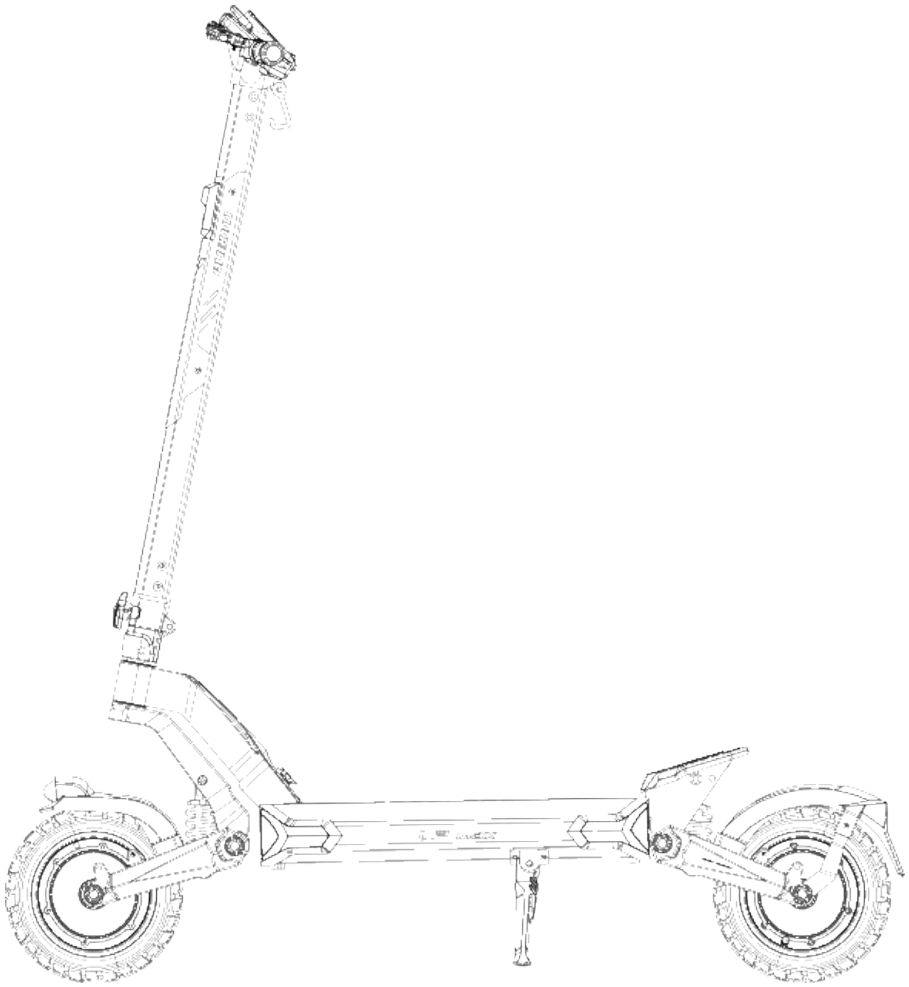

USER MANUAL

*Before your first operation, please read the user manual carefully!

Contents

1. Note
2. Warning
3. Diagram
4. Specification
5. Package List
6. Assembly Guide
7. Tips for Beginners
8. Folding & Unfolding
9. LCD Display Guide
10. Charging
11. Maintenance
12. Troubleshooting
13. Warranty
14. Compliance Statements

1. Note

Before your first ride, it is important for you to know your new e-scooter well, so that you can get the best performance, comfort, enjoyment and safety from it during your ride. To understand the new scooter and the correct operation, you should first read the manual carefully.

Second, it is significant to take your first ride under a safe and controlled circumstance, like staying away from cars, obstacles and other riders.

Third, scooters are vehicles with certain risks. It's necessary to learn the local traffic rules about riding e-scooters on public roads before your first ride and follow the rules on your each ride. For your own safety, never forget to put on a qualified helmet before getting on the scooter. Protective gear, like elbow guards and knee pads, is suggested for a better protection.

Fourth, the electric scooter is supplied without basic mandatory equipment, which may vary from place to place. Therefore, if you intend to use the e-scooter on public roads, it's necessary to equip the scooter with the basic mandatory equipment, in accordance with the relevant laws and regulations.

In addition, this product is designed for your personal use. Do not use it for commercial or other purposes.

Last, keep this manual safe for reference.

2. Warning

Before each charge, check the charger, cable and plug. If there is any damage, do not use the charger.

Before riding, check the tire pressure and check whether the handlebar are installed correctly and tightly and whether the headlight is clean and not covered by anything.

Make sure the battery contains enough power before riding.If the battery level is low during your ride, keep the scooter running at a slow and constant speed and charge it as soon as possible. When braking on a wet road, the braking distance is usually longer than on a dry road. Therefore, brake earlier for a safer stop.

Furthermore, avoid puddles, wet mud, swamps, water, snow or ice. Try not to use the e-scooter on rainy, stormy or snowy days. If the electric parts (control unit, engine and battery) get damp, wet or soaked, it will cause irreversible damage, or even a battery explosion.

This product can only be used by one adult at a time. Do not carry any extra passengers. And don't ride it if you don't feel well or under the influence of alcohol or drugs.

This vehicle is not a toy. Same as other vehicles, it is possible to fall, crash or encounter other dangerous situations. Please don't offer your e-scooter to anyone that doesn't know how to use it correctly. If you let anyone else ride your scooter, it will be your responsibility to ensure that all riders understand all warnings, cautions, instructions and safety precautions, and to ensure that they are able to use this product safely and responsibly and protect themselves and others from injury.

3. Diagram

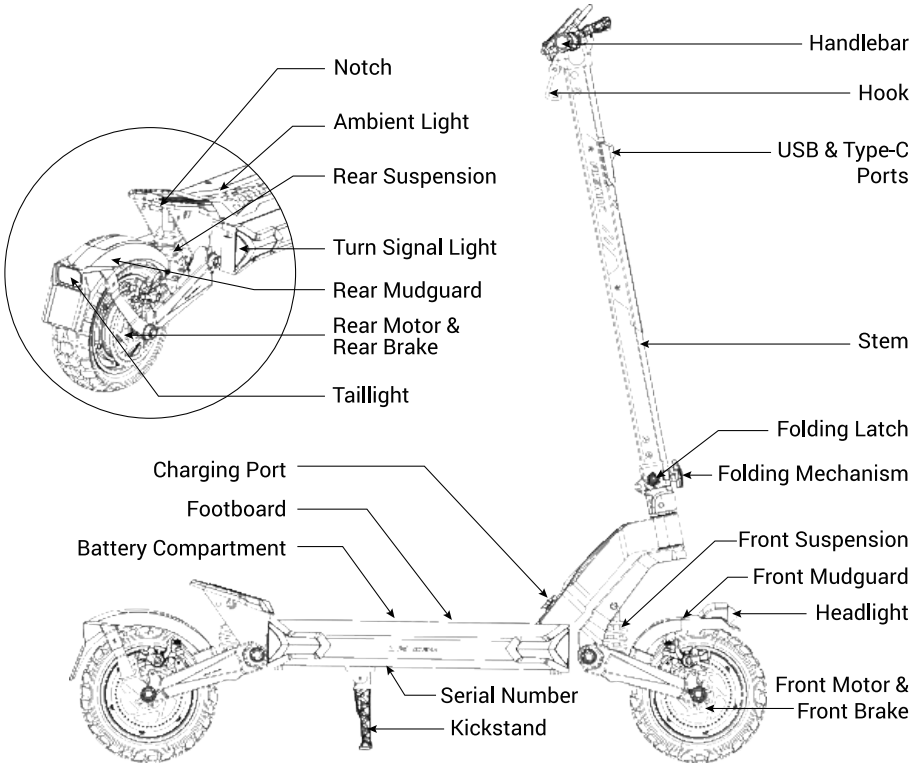

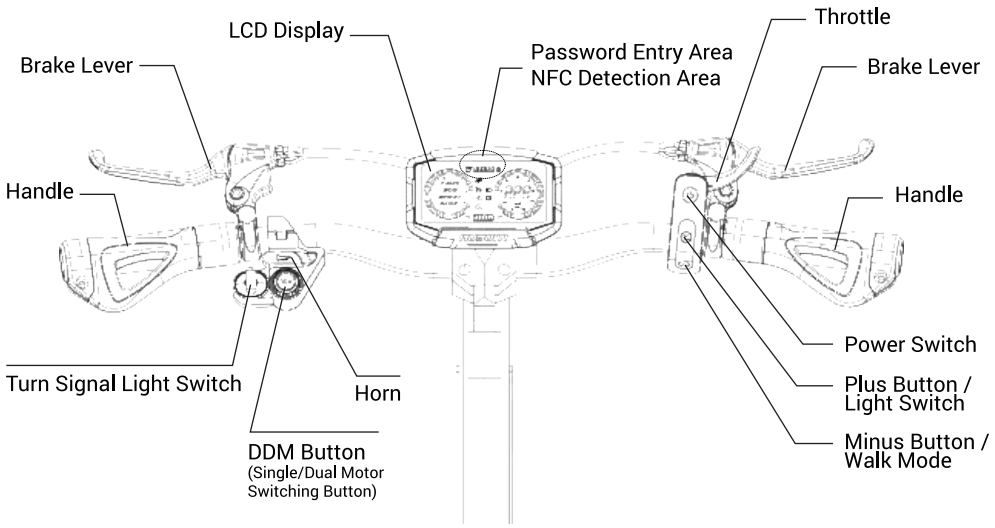

4. Specification

L2 Max			
Version		**Single Motor**	**Dual Motor**
Basic Spec	Speed Level (Single Motor)	28/45/50 km/h(Eco/Sport/Race)	28/45/50 km/h(Eco/Sport/Race)
	Speed Level (Dual Motor)	/	28/50/65 km/h(Eco/Sport/Race)
	Unfolded Size	1280×690×1435 mm	
	Folded Size	1280×690×560 mm	
	N.W	30kg	33.3 kg
	Length of Handlebar	690 mm	
	Footboard Top to Ground	265 mm	
	Footboard Bottom to Ground	185 mm	
	Size of Footbard	550×185 mm	
	Max Load	130 kg	
	Waterproof Level	IP54	
	Material of Frame	6061 Aluminium Alloy	
	Max Range	90 km	
Motor	Rated Voltage	48 V	
	Power	1000W	1000W×2
	Max RPM	1300	
	Max Output Torque	30 N.M	

Battery	Capacity/Voltage	20.8Ah / 48V
	Power Capacity	998.4 Wh
	Charging Time	14h (by one charger), 7h (by two chargers) (Only one charger included)
	Protection System	Yes
Charger	Input	100-240 V
	Output	54.6V / 1.5A
Brake	Type	E-ABS + Front & Rear Disc Brakes
Tire	Size	10"×3.0"
	Type, Material	Vacuum Rubber Tires
	Best Tire Pressure	45 PSI
Display	Type	4.5" LCD
	NFC	Yes
Recommended Rider Heights		1.5-2 m

Note: *The maximum speed and range data are provided by the Ausom lab. The maximum range is achieved under the following conditions: a full charge, a 65kg load, 20°C temperature, constant speed of 15km/h on flat roads with no strong wind, and no braking.*
The actual data may vary based on different road conditions, temperature, humidity, wind speed, and the riders habits (the frequency of braking, speed shifting, etc.) and rider's weight.

5. Package List

E-Scooter x 1	T10 Tamper-Proof Hex Key x1	Gloves x 2
User Manual x 1	3mm Allen Key x 1	NFC Card x 2
Charger x 1	4mm Allen Key x 1	Spare NFC Card With Lanyard x 1

6. Assembly Guide

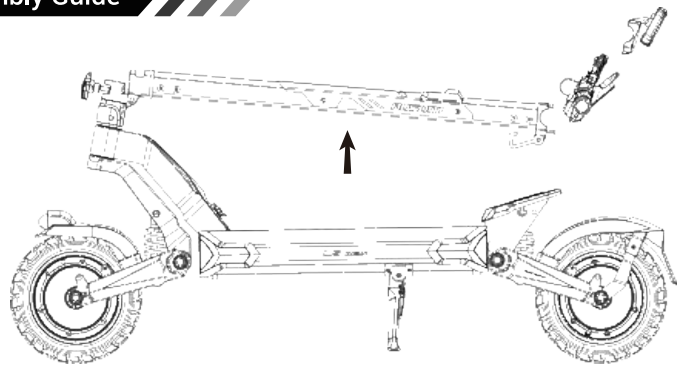

1. Open the kickstand to make it stand up and unfold the stem.

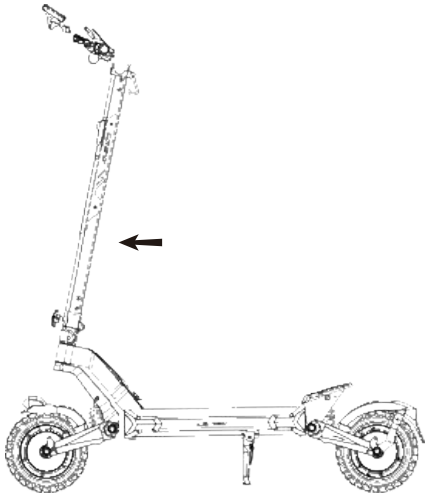

2. Push the stem forward till it is straight.

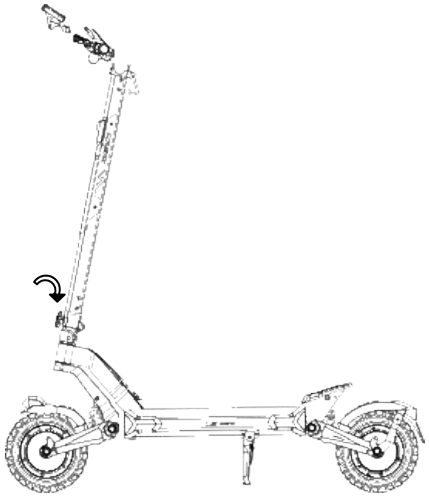

3. Lock the folding mechanism. (Please refer to the folding steps.)

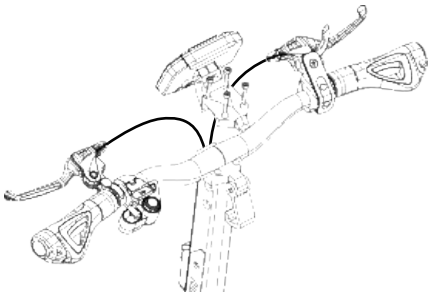

4. Loosen the screws. Place the handlebar on it and make sure the handlebar is in the middle of the stem.

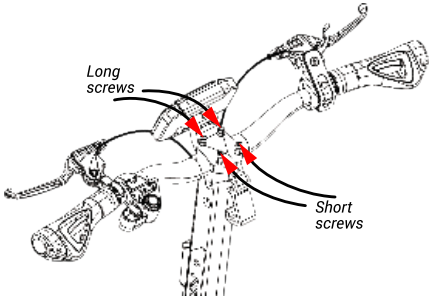

5. Tighten the screws to secure the display and handlebar.

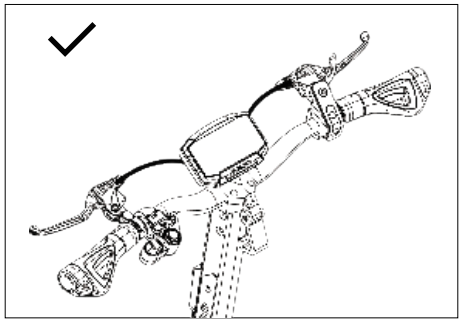

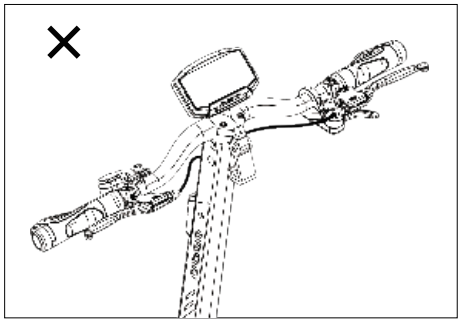

7. Tips for Beginners

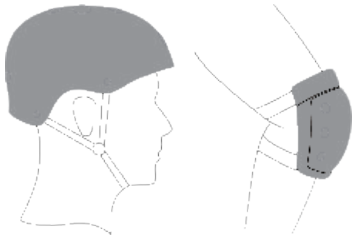

1. Wear protective gear, including a qualified helmet, knee pads, wrist and elbow guards.

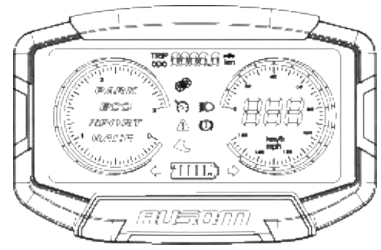

2. Turn the display on and check the battery. For the first ride, make sure the scooter is fully charged and the tires are properly inflated.

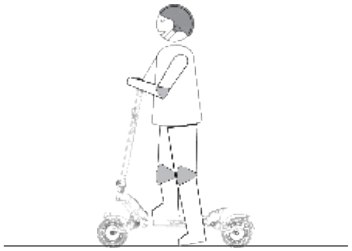

3.Put one foot on the footboard and another foot on the ground. Then, push the scooter forward.

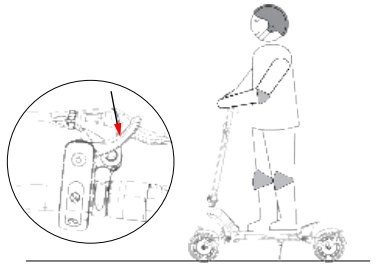

4.When the scooter starts to run steadily, make both of your feet stand on the scooter. Accelerate the scooter by pressing the thumb throttle slightly.

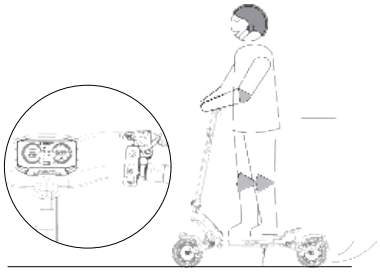

5.Decelerate it slowly by releasing the thumb throttle. Grasp the brake lever for an emergency stop, if necessary.

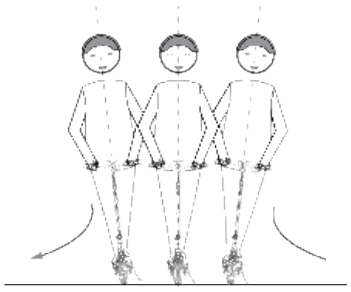

6. Incline your body slightly to the direction of steering and turn the handlebar slowly when making a turn.

8. Folding & Unfolding

Note: *The folding and unfolding steps can only be done when the power is turned off.*

Folding

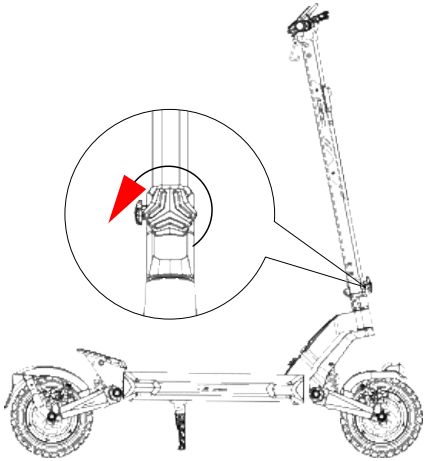

1. Hold the stem with one hand and turn the knob of the folding mechanism counterclockwise with the other hand.

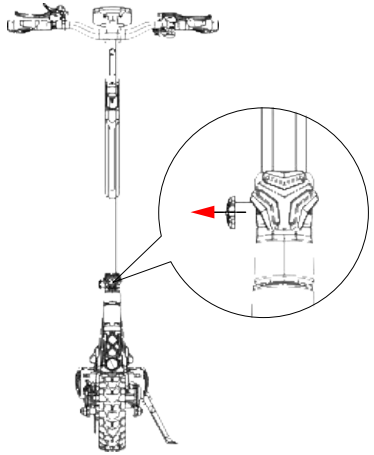

2. Hold the stem with one hand and pull the folding latch outward with the other hand.

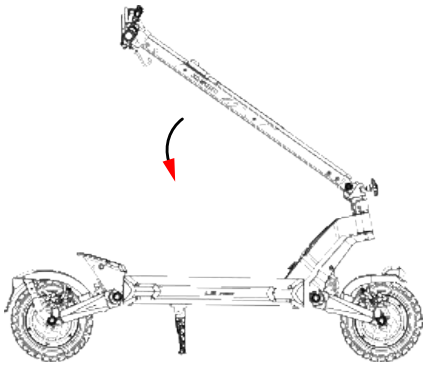

3. Put the stem down.

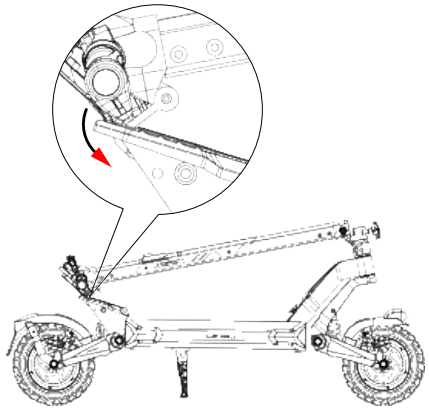

4. Secure the stem by fitting the hook into the slot and snap it into place.

Unfolding

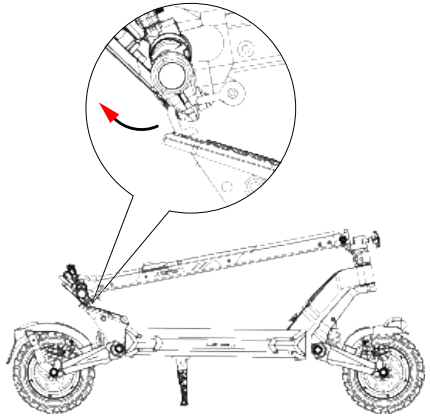

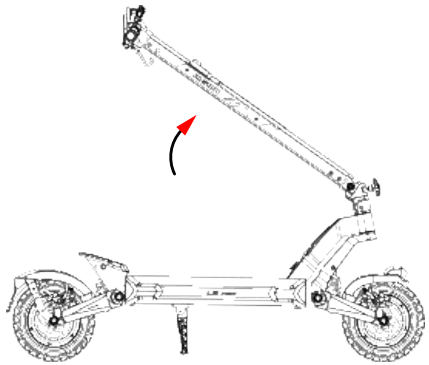

1. Press down the hook with one hand and pull up the stem with the other hand.

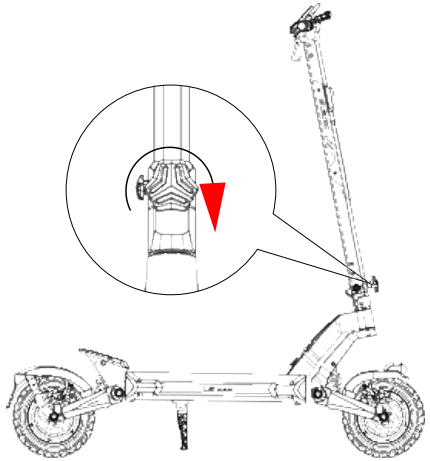

2. Pull up the stem till the folding latch buckles up itself and turn the knob clockwise tightly.

9. LCD Display Guide

Contents on The Display

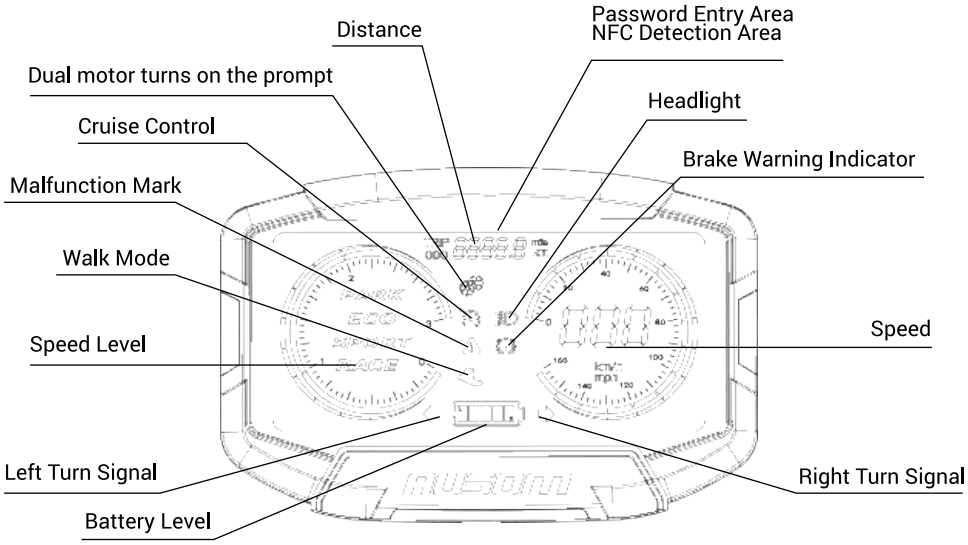

Functions & Operations

1.Turning On/Off the Display

By NFC:

Press ⏻ for 3 seconds, and the screen will display "____". Then place the NFC card over the NFC detection area. The display will be unlocked after the NFC detection.

By Password:

Press ⏻ for 3 seconds, and the screen will display "____". To enter the password, press ⚡ or 🚶 to select the number for the current digit and press ⏻ to move to the next digit. After entering all the digits, press ⏻ for 2 seconds to confirm. The display will be unlocked after confirming the password. The default password is 0000.

To turn off the display, long press ⏻ for 3 seconds.

2.Shifting Speed Level

Press ⚡ or 🚶 to shift among 3 speed levels.

3. Switching between Single-Motor and Dual-Motor Modes (Only for Dual Motor Version)

When the power is turned on, short press the DDM button to switch between single-motor and dual-motor modes. When the indicator light of the DDM button is on, it is in the dual-motor mode.

4. Cruise Control

Aftering enabling the cruise control function in P17 of the hidden menu, ride the scooter at a constant speed for 7 seconds to enter the cruise mode. Press the brake lever or throttle to terminate the cruise mode.

5. Walk Mode

When the scooter is not in the Park mode, press and hold 🚶 to activate the walk mode and release 🚶 to terminate the walk mode.

6. Park Mode

Enable the non-zero start mode first. When the scooter has been stationary for 30 seconds, it will automatically enter the Park mode. By pressing ⚡ , it will exit the Park mode.

7.Turning On/off the Headlight

Press ⚡ for 3 seconds to turn on/off the headlight.

8. Turning On/off Ambient Lights

Quickly double press ⚡ to turn on/off the ambient lights.

9. Switching Turn Signal Lights

Push the turn signal light switch to the left to activate the left turn signal and push it to the right to activate the right turn signal. Press down the turn signal light switch to turn off the turn signal.

Battery Level Indicator

81%-100% 61%-80% 41%-60% 21%-40% 0%-20%

Hidden Menu

When the display is turned on, long press ⚡ and 🚶 to enter the hidden menu.

In the hidden menu, short press the ⏻ to switch among different parameter pages from P01 to P23.

On the parameter page, press ⚡ or 🚶 to increase or decrease the value.

To exit the hidden menu, long press ⚡ and 🚶. Alternatively, it will exit the hidden menu automatically if no operation is performed for 30 seconds.

P02: Switching between km and mile. 0 means km and 1 means mile. (Default: 0)

P04: Setting the sleep time between 0-60 minutes. 0 means it never sleeps. (Default: 5 minutes)

P08: Setting the speed limit between 5-100. 100 means 100% of the maximum speed. (Default: 100)

P09: Switching between zero and non-zero start, 0 means zero start, and 1 means non-zero start. (Default: 1)

P11: Setting the EABS brake force level, ranging from 1 to 5. 0 means off, 1 means the weakest and 5 means the strongest. (Default: 3)

P12: Setting the soft and hard start strength, ranging from 1 to 5. 1 means the softest and 5 means the hardest. (Default: 3)

P17: Cruise control: 0 means the cruise mode is off, and 1 means the cruise mode is on. (Default: 0)

P18: Binding and unbinding the NFC card. Long press ⚡ to bind, and long press 🚶 to unbind.

P19: Adjusting the backlight brightness. Level 1 is the darkest and level 3 is the brightest. (Default: level 3)

P23: Changing password. Enter the original password first. To enter the password, press ⚡ or 🚶 to select the number for the current digit and press ⏻ to move to the next digit. After entering all the digits, press ⏻ for 2 seconds till "S23" appears on the display. Then, enter a new 4-digit

Note: Parameter pages not listed above are not adjustable.

Error Tracking

When the malfunction mark shows up on the screen, the number at the center of the screen is the error code. Please check the following problems and solutions.

Error Codes	Problems	Solutions
00	A fault has been found or resolved.	1) Restart the scooter.
6	Battery Undervoltage	1) Fully charge the battery.
7	Motor fault	1) Re-plug the motor and check whether the plug is properly connected. 2) Replace the motor or motor cable.
8	Throttle fault	1) Reconnect the throttle. 2) Check the throttle spring to ensure it's seated correctly. 3) Replace the throttle.
9	Controller fault	1) Check whether the pins of the controller plug are properly connected. 2) Replace controller.
10	Communcation receiving fault	1) Reconnect the LCD display. 2) Replace the display or display cable.
11	Communcation sending fault	1) Reconnect the controller. 2) Replace the controller or controller cable.

10. Charging

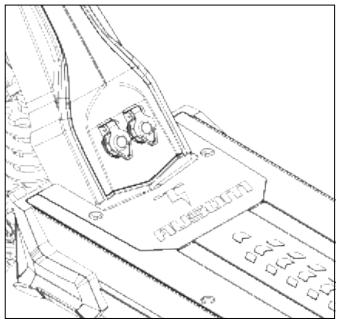

A) The charging port is in the front of the footboard with a cover.

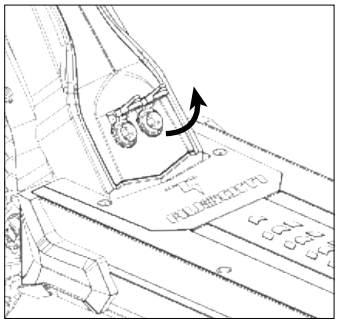

B) Open the cover.

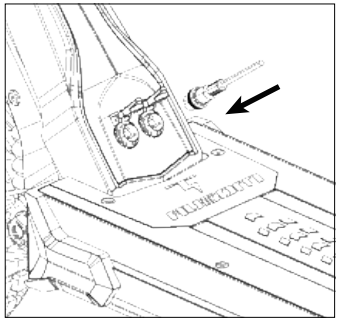

C) Plug in the charger and start charging.

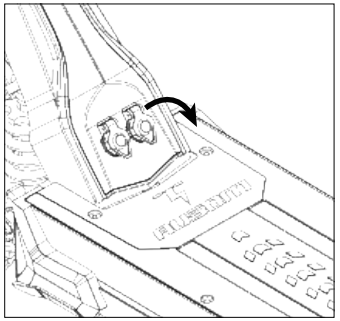

D) Unplug the charger when charging is complete and close the cover.

11. Maintenance

Cleaning

Turn the power off, unplug the scooter and cover the charging port before cleaning the scooter. Use a soft and dry cloth to wipe the mainframe clean. Do not wash your e-scooter with alcohol, gasoline, acetone, or other corrosive/volatile solvents. These substances may damage the appearance and internal structure of the scooter. Do not soak the scooter or wash it with a pressure washer or hose.

Storage

A)Scooter

1. Do not expose the e-scooter to direct sunlight or rain for an extended period of time, and avoid storing it at a high temperature. It's better to store the scooter in a dry and safe place at

a temperature of 0°C-25°C.
2. Avoid corrosive gas, so as to avoid chemical corrosion and damage to the electrical parts and painted surfaces, which may lead to operational failure and accident.
3. Don't store it in an explosive or flammable environment or near flammable liquids.
4. Don't store it in the car trunk for a long term on scorching days.

B)Lithium-ion Battery

1. Charge the battery in time and avoid draining the battery completely. Because completely draining the battery may cause permanent damage to it. Never keep the lithium-ion battery discharged for a long time. If the voltage of the cell drops under allowed limit due to self-dis charge, it will cause damage. For maximum durability, store the battery charged up to 50% of the maximum capacity. Charge the battery once or twice a month when the scooter isn't used for a long term.
2. Never charge the battery in an explosive or flammable environment or near flammable liquids.
3. Do not charge the battery on a flammable substrate, such as paper, textiles, etc., when the battery is detached from the vehicle. Charge it at a safe place away from flammable items.
4. Never charge a battery which is already damaged or is leaking.
5. Don't charge the battery too long. Stop charging when it gets full.
6. Charge or discharge the battery at a temperature within 0~45°C.
   It is better to store the battery indoors within 20°C~25°C temperature while it is not being used for a long time. (When used at 25°C, the battery range and performance is at its best. But using it at a temperature below 0°C can decrease its mileage and performance.)
7. Do not store the battery at a too high or too low temperature.
   The humidity of the storage place should be 60±25%RH. As for the working place, the humidity should be 5~85%RH.
8. Do not puncture, hit or crash the battery.
9. Don't try to disassemble the old or damaged battery or throw it away.
10. Please take it to the local professional battery recycling facility.

Warning: Please try not to charge indoors.

12. Troubleshooting

Please check the following issues and solutions before sending the product to designated repair offices.

Problem	Possible Causes	Solutions
The scooter can't be turned on.	a.The battery is dead. b.The electric wire is not plugged in properly or tightly.	a.Charge the battery. b.Reconnect the electric wire properly and tightly or contact the re-seller for help.
Brakes are not responsive.	a.Brake cables are not tight enough. b.Worn brake pads; c.The brake caliper screws are loose.	a.Tighten the brake cable and try again. b.Replace the brake pads. c.Tighten the brake caliper screws.
The battery fails to charge.	a.The charger isn't properly plugged in. b.It is out of the recommended temperature range. c.The battery is charged below rated voltage. d.It is damaged.	a.Plug it in properly and charge it again. b.Charge it at a temperature of 0-45℃. c.Charge it at rated voltage. d.Contact the re-seller for help.
The motor fails to work.	a.It's in non-zero start mode. b.The electric wire isn't plugged in properly. c.Motor/controller faults;	a.Slide the scooter forward above 5km/h and then try the throttle. b.Plug in the electric wire properly. c.Contact the re-seller for help.
Insufficient Riding Distance	a.The battery isn't fully charged. b.Low tire pressure. c.Frequent braking; d.Battery aging or battery capacity attenuation; e. Low ambient temperature;	a.Fully charge the battery. b.Pump up the tires. c.Develop good riding habits. d.Replace the battery. e.It's normal.

Attention: if any other failures occur and you can not find any solution from the chart above, please contact the re-seller to solve it. Any other maintenance and repair that need to be done by using professional tools and techniques, should be performed by a qualified scooter mechanic designated by manufacturer or the maintenance center.

13. Warranty

Ausom provides an easy, reliable and efficient service for all products under our warranty. Please refer to the chart below for the warranty periods of various products and accessories starting from the date of purchase.

Our distributors, partners, sellers and re-sellers should provide after-sale services directly to their customers. If your Ausom product has a warranty-related issue, please contact the seller from whom you purchased the product. You should provide all relevant order information, such as order numbers, invoices, receipts, etc.

Model	Components	Warranty	Components	Warranty
L2 Max	Frame	1 year	Brake Assembly	6 months
	Motor	1 year	Folding Assembly	6 months
	Controller	1 year	Headlight	6 months
	Throttle Control	1 year	Taillight	6 months
	LCD Display	1 year	Handlebar	6 months
	Battery	6 months	Wheel	30 days
	Charger	6 months	Handlebar Grip	14 days
	Disc Brake	6 months	Others	14 days

WARRANTY PROCESS

- Buyers have to provide sufficient proof of purchase.
- A description of the defect needs be provided in order to issue a warranty claim.
- Visible proof of defect must be provided along with the item's serial number (if any).
- Ausom must document what happens when buyers troubleshoot the products.
- You may need to return an item for quality inspection.
- When you return the defective product, you should put it in the original packaging or the packaging approved by the dealer.

VALID PROOF OF PURCHASE

- The order number of your online purchase from the Ausom's authorized reseller. (Check the resellers from where to buy page.)
- Sales invoice.
- Dated sales receipt from the authorized Ausom's reseller.

Please note that more than one type of proof of purchase may be required to process a warranty claim (such as receipt of money transfer and confirmation of address that the item was originally shipped to).

WARRANTY WILL BE VOID IN THE FOLLOWING SITUATIONS:

- The product is out of the warranty period.
- The product is lost or stolen.
- The product is free or complimentary.
- The product is used in inappropriate ways or conditions, including but not limited to: falls, extreme temperatures, water, improper operations.
- The product is not in its original state, such as modifications.
- The product has been used in combinations with accessories that is not compatible with the product.
- Buyers have no sufficient proof of purchase of products.
- Unsupported software or firmware has been installed to the product.
- When a damage is caused by the customer, the customer is responsible for the costs for the repairs and shipment.
- Customers' personal items are sent to Ausom, instead of the Ausom products.
- The product is purchased from an unauthorized re-seller.

14. Compliance Statements

	This symbol indicates that the product is capable of being recycled.
	This symbol indicates that the product should not be disposed of as household waste. The product must be sent to separate collection facilities for recovery and recycling of electrical and electronic equipment.
	This symbol indicates that the product inside the packaging could be easily damaged if dropped or handled without care and attention. The contents are fragile!
	This symbol indicates that the product should be kept away from rain and in dry conditions.
	The warning sign indicates a potential hazard, danger, obstacle, or condition requiring special attention.
	This product is in compliance with the standards of the European Communi-

*Leggere attentamente il manuale prima di usare il prodotto!

Contenuti

1. Note
2. Avvertenze
3. Diagramma
4. Specifiche
5. Elenco Contenuti
6. Consigli per Principianti
7. Piegare & Aprire
8. Guida Display LCD
9. Caricabatterie
10. Manutenzione
11. Risoluzione Problemi
12. Garanzia
13. Dichiarazioni di conformità

1. Note

Prima di usare il tuo e-scooter, è necessario conoscerlo bene così da trarre la miglior performance, comfort, divertimento e sicurezza possibili durante la prima corsa e le successive. Leggi attentamente questo manuale per conoscere a fondo il tuo nuovo scooter e le corrette operazioni da mettere in pratica.

È importante che il primo utilizzo avvenga in circostanze sicure e controllate, per esempio stando a distanza di sicurezza dalle automobili, da ostacoli e da altri motociclisti.

Gli scooter sono veicoli non esenti da rischi. È necessario conoscere le regole stradali locali sull'utilizzo degli e-scooter sulle strade cittadine prima di guidare il veicolo e seguirle scrupolosamente. Non dimenticare mai di indossare un casco omologato, è per la tua sicurezza. Ti consigliamo l'uso di abbigliamento protettivo, come protezioni per gomiti e ginocchiere, per avere maggior sicurezza.

Gli scooter elettrici vengono venduti senza l'attrezzatura obbligatoria basilare, che può cambiare da luogo a luogo. Per questo, se hai intenzione di usare il tuo e-scooter sulle strade pubbliche, dovrai equipaggiarlo con l'attrezzatura suggerita dalle leggi vigenti.

Questo prodotto è stato creato per uso personale, non utilizzarlo per fini commericali o qualsiasi altro scopo.

Infine, conserva questo manuale per eventuale consultazione.

2. Avvertenze

Prima di ogni ricarica, controlla il caricabatterie, il cavo e la presa. Se noti difetti o punti danneggiati, non usare il caricabatterie.

Prima dell'utilizzo del prodotto, controlla la pressione delle gomme e che il manubrio sia installato

correttamente e in maniera salda, assicurati inoltre che i fari siano puliti e non coperti. Assicurati che la batteria sia carica prima di partire.Se il livello della batteria dovesse calare durante la corsa, viaggia a una velocità bassa e costante e poi ricarica appena possibile.

Lo spazio di frenata su asfalto bagnato è maggiore rispetto al valore su strada asciutta. Per una maggiore sicurezza su strada bagnata, cerca sempre di frenare prima del solito.

Evita pozzanghere, fango umido, zone acquitrinose, acqua, neve e riso. Cerca di non usare il tuo e-scooter durante le giornate piovose, nevose o durante un temporale. Se le parti elettriche (centralina, motore e batteria) dovessero inumidirsi o bagnarsi, potrebbero subire danni irreversibili oppure, addirittura, generare l'esplosione della batteria.

Questo veicolo è progettato per trasportare una persona alla volta. Non trasportare passeggeri e non usarlo se non ti senti bene, oppure se hai consumato alcol o droghe.

Questo veicolo non è un giocattolo. Pertanto, come accade con altri mezzi di trasporto, è possibile cadere, fare incidenti o incontrare altri tipi di pericolo. Per favore, non prestare il tuo veicolo a qualcuno che non sia a conoscenza delle norme di sicurezza per utilizzarlo. Nel caso prestassi il tuo scooter, sarà tua responsabilità assicurarti che la persona comprenda i pericoli derivanti dal suo uso e impari le regole e le istruzioni per un uso corretto e sicuro.

3. Diagramma

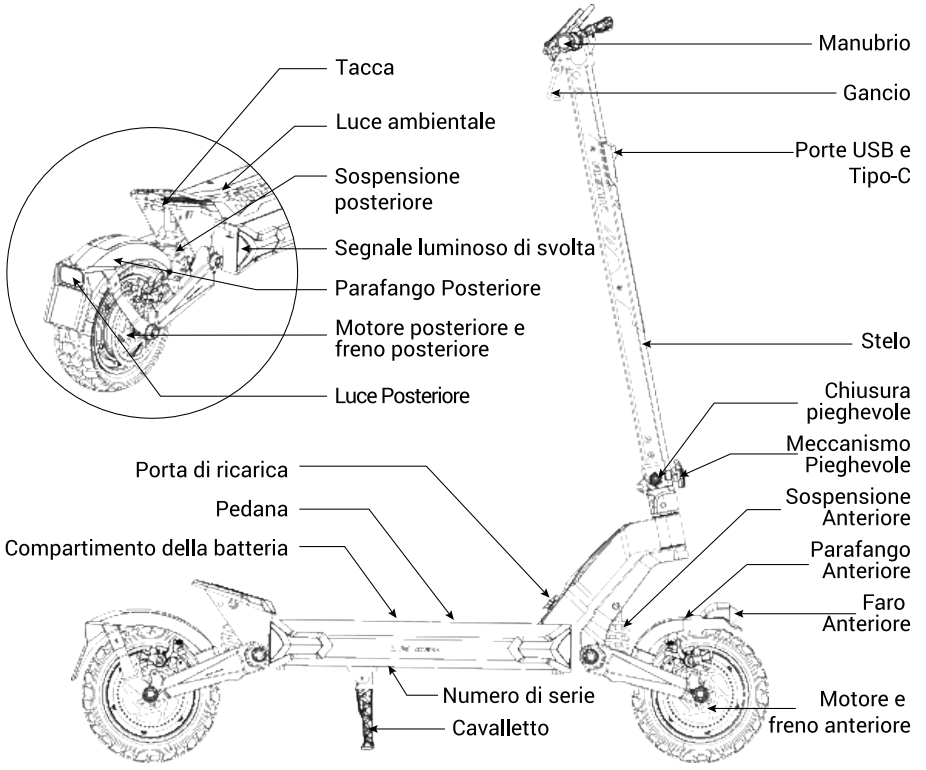

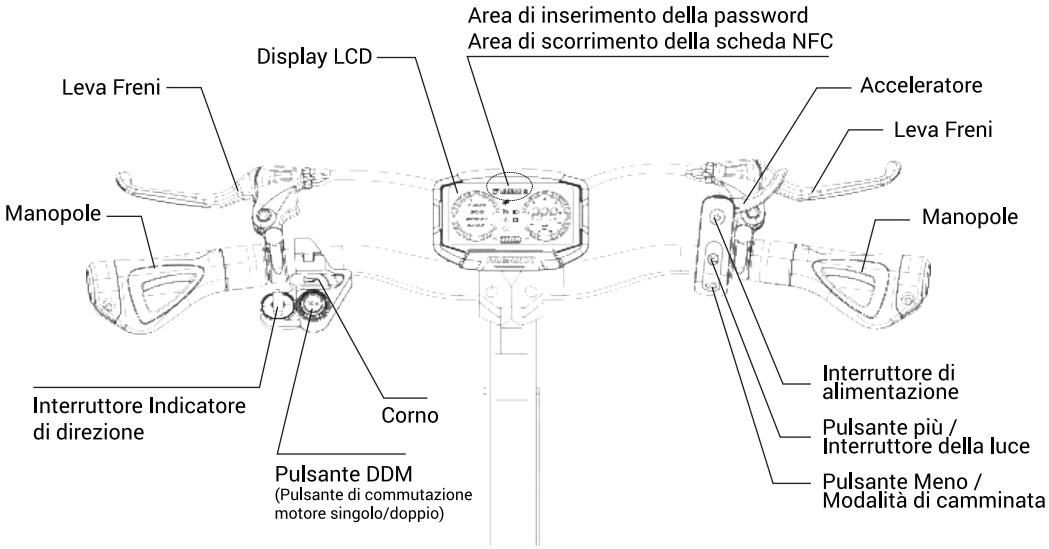

4. Specifiche

L2 Max			
Version		**Single Motor**	**Dual Motor**
Spec. Base	Livello di velocità (motore singolo)	28/45/50 km/h(Eco/Sport/Race)	28/45/50 km/h(Eco/Sport/Race)
	Livello di velocità (motore doppio)	/	28/50/65 km/h(Eco/Sport/Race)
	Grandezza Non Piegato	1280×690×1435 mm	
	Grandezza Piegato	1280×690×560 mm	
	N.W.	30kg	33.3 kg
	Lunghezza Manubrio	690 mm	
	Parte superiore della pedana a terra	265 mm	
	Fondo della pedana a terra	185 mm	
	Dimensioni del Footbard	550×185 mm	
	Carico Max	130 kg	
	Livello Impermeabilità	IP54	
	Materiale	6061 Lega di alluminio	
	Portata massima	90 km	
Motore	Pot. Nominale / Tensione	48 V	
	Potenza Istantanea Max	1000W	1000W×2
	Giri al Minuto Max	1300	
	Coppia Motrice Max	30 N.M	

Batteria	Capacità/Tensione elettrica	20.8Ah / 48V
	Capacità di potenza	998.4 Wh
	Tempo di Carica	14 ore (con un caricatore), 7 ore (con due caricatori) (solo un caricatore incluso)
	Sistema di Protezione	Sì
Caricatore	Input	100-240 V
	Output	54.6V / 1.5A
Freno	Tipo	E-ABS + freni a disco anteriori e posteriori
Pneumatico	Misurare	10"×3.0"
	Tipo, Materiale	Pneumatici in gomma a vuoto
	pressione ottimale dei pneumatici	45 PSI
Display	Tipo	4.5" LCD
	NFC	Sì
Altezza Consigliata dei Passeggeri		1.5-2 m

Nota: *la velocità max e l' intervallo di dati sono forniti da Ausom lab. L'intervallo massimo è raggiunto tramite le seguenti circostanze: batteria piena, carico di 65 KG, temperatura di 20°C, velocità costante di 15 km/h su strade pianeggianti senza vento forte e nessuna frenata. I dati reali possono variare in base alle diverse condizioni della strada, di temperatura, di umidità, vento e abitudini (frequenza di frenata, cambio di velocità) e peso del guidatore.*

5. Elenco Contenuti

E-Scooter x 1	Chiave esagonale T10 antimanomissione x 1	Guanti x 2
Manuale x 1	Chiave a brugola da 3 mm x 1	Scheda NFC x 2
Caricatore x 1	Chiave a brugola da 4 mm x 1	Scheda NFC di ricambio con cordino x 1

6. Guida al montaggio

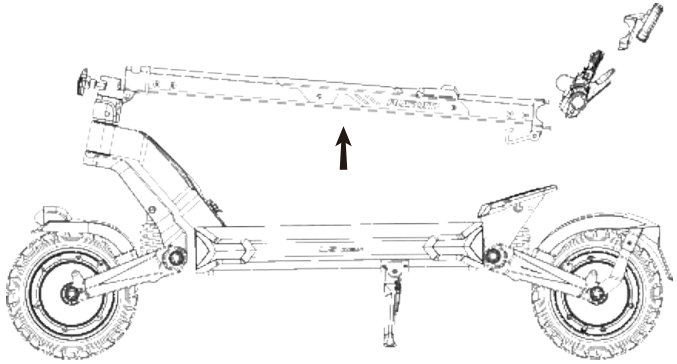

1. Aprire il cavalletto per farlo stare in piedi e dispiegare lo stelo.

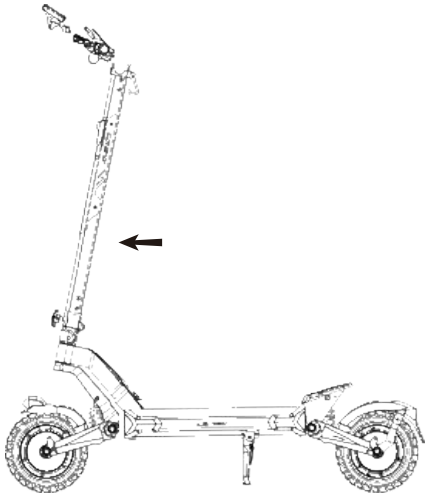

2. Spingere lo stelo in avanti finché non è dritto.

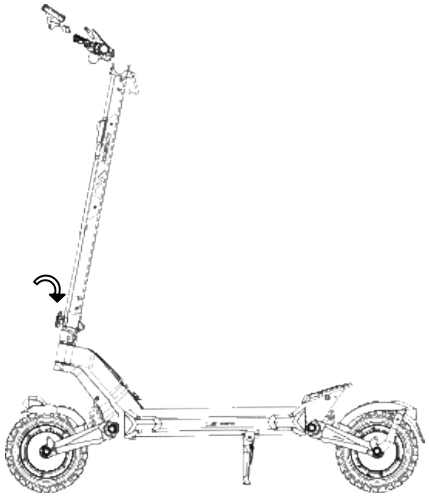

3. Bloccare il meccanismo di piegatura. (Fare riferimento alle fasi di piegatura).

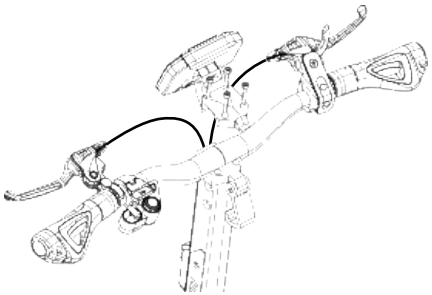

4. Allentare le viti. Posizionare il manubrio e assicurarsi che il manubrio sia al centro dell'attacco manubrio.

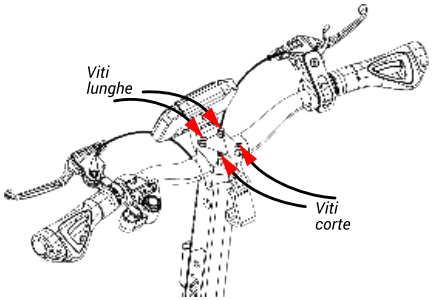

5. Serrare le viti per fissare il display e il manubrio.

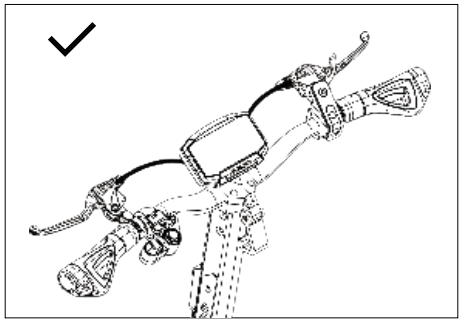

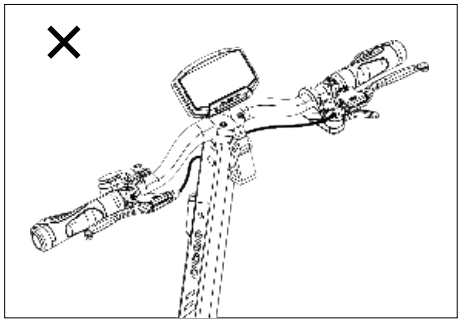

7. Consigli per Principianti

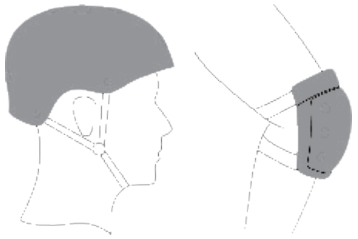

1. Indossa abbigliamento protettivo, come caschi omologati, ginocchiere e protezione per polso e gomito.

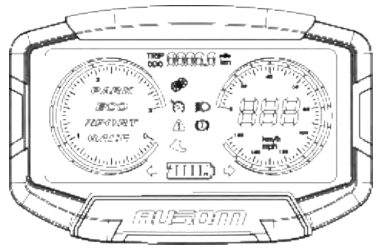

2. Accendere il display e controllare la batteria. Per la prima uscita, accertarsi che lo scooter sia completamente carico e che i pneumatici siano gonfiati correttamente.

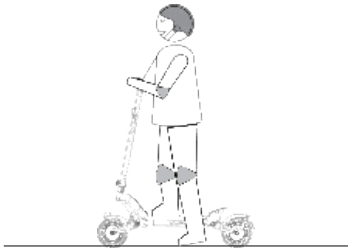

3. Poggia un piede sulla pedana e uno sul terreno. Poi spingi lo scooter in avanti.

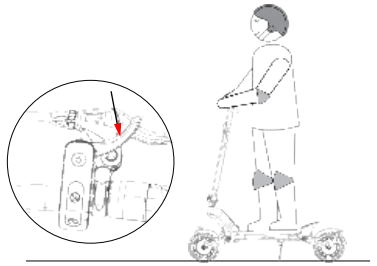

4. Quando lo scooter comincerà a funzionare regolarmente, poggia entrambi i piedi sulla pedana. Aumenta la velocità premendo leggermente sull'acceleratore.

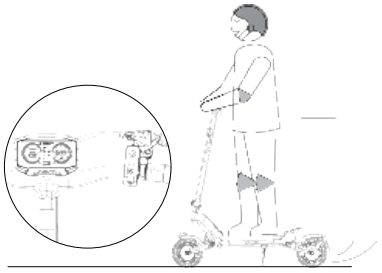

5. Decelera rilasciando lentamente la l'acceleratore. Afferrare la leva del freno per un arresto di emergenza, se necessario.

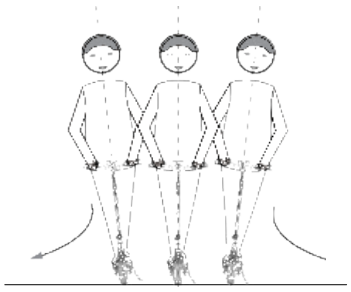

6. Inclina leggermente il corpo nella direzione di guida e gira lentamente il manubrio per sterzare.

8. Piegare & Aprire

Nota: *Lo scooter si può piegare e aprire solo se il veicolo è spento.*

Piegare

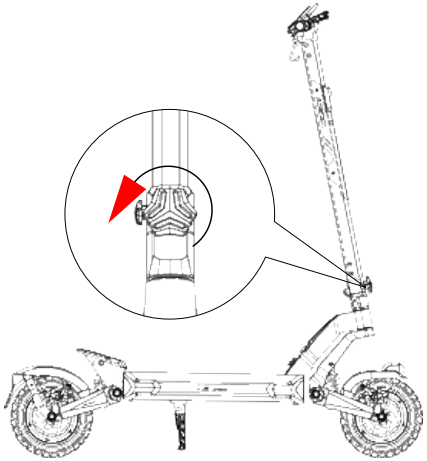

1. Tenere lo stelo con una mano e ruotare la manopola del meccanismo di ripiega-mento in senso antiorario con l'altra mano. in
senso orario con l'altra mano.

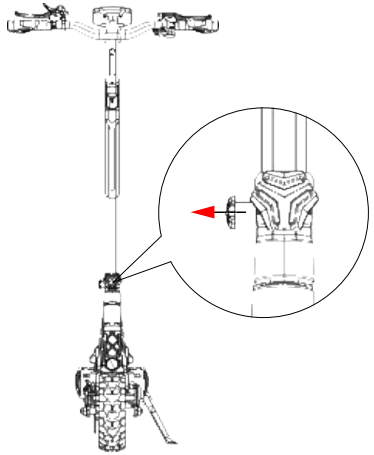

2. Tenere lo stelo con una mano e tirare con l'altra mano la chiusura a libro verso l'esterno.

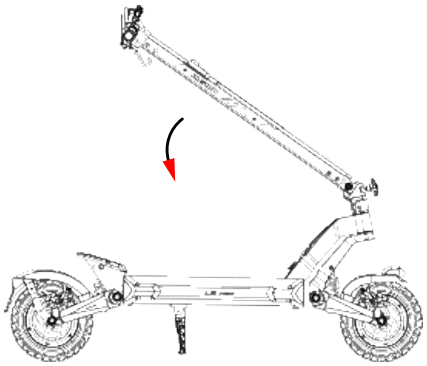

3. Abbassare il gambo.

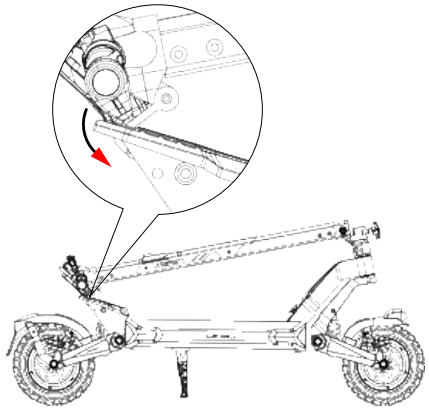

4. Fissare lo stelo inserendo il gancio nella fess ura e facendolo scattare in posizione.

Aprire

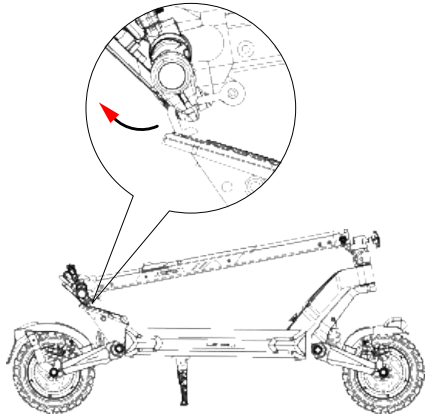

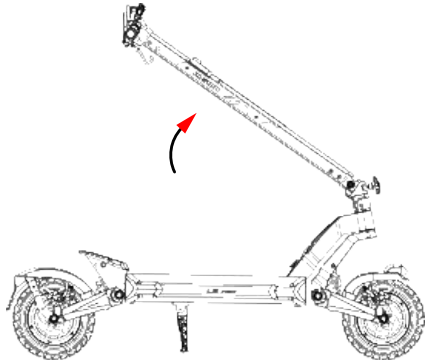

1. Premete il gancio con una mano e tirate su il gambo con l'altra mano.

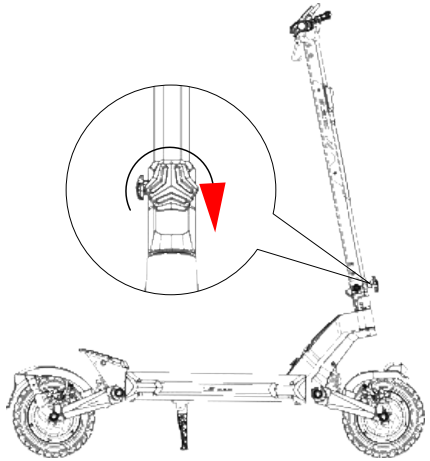

2. Tirare lo stelo verso l'alto fino a quando la chiusura a libro si allaccia da sola e ruotare saldamente la manopola in senso orario.

9. Guida Display LCD

Elementi del Display

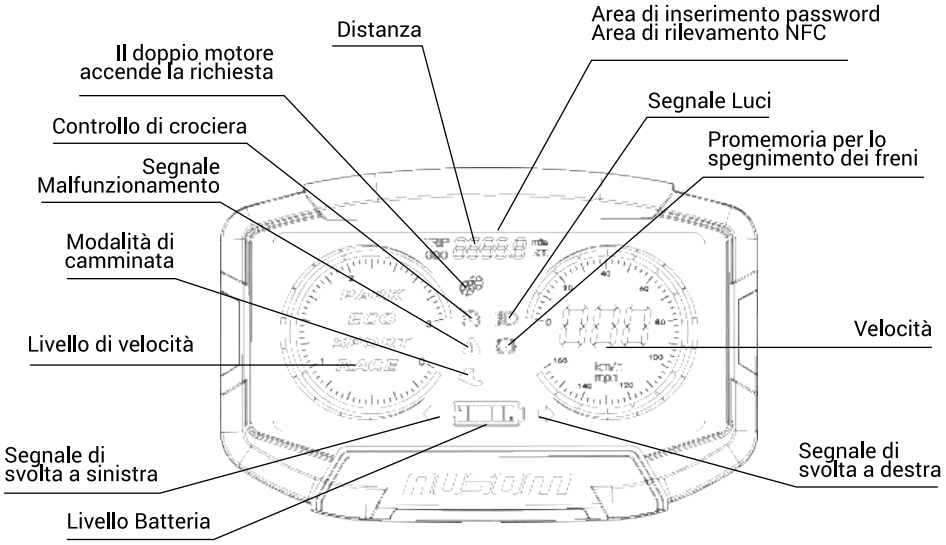

Funzioni & Operazioni

1.Accensione / Spegnimento
Tramite NFC:
Premere ⏻ per 3 secondi e lo schermo visualizzerà "----". Quindi posizionare la scheda NFC sull'area di rilevamento NFC. Il display verrà attivato dopo il rilevamento NFC.
Tramite con password:
Premere ⏻ per 3 secondi e lo schermo visualizzerà "----". Per immettere la password, premere ⚡ o 🚶 per selezionare il numero per la cifra corrente e premere ⏻ per passare alla cifra successiva. Dopo aver immesso tutte le cifre, premere ⏻ per 2 secondi per confermare. Il display verrà sbloccato dopo aver confermato la password. La password predefinita è 0000.
Per spegnere il display, premere a lungo ⏻ per 3 secondi.

2. Livello di velocità di cambio
Premere il ⚡ o 🚶 per spostarsi tra i livelli a 3 velocità.

3. Commutazione tra modalità monomotore e bimotore (Solo per versione a doppio motore)
All'accensione, premere brevemente il pulsante DDM per passare dalla modalità a motore singolo a quella a doppio motore. Quando la spia del pulsante DDM è accesa, è attiva la modalità a doppio motore.

4. Controllo di crociera
Dopo aver abilitato la funzione di controllo della velocità di crociera in P17 del menu nascosto, guidare lo scooter a velocità costante per 7 secondi per accedere alla modalità di crociera. Premere la leva del freno o l'acceleratore per terminare la crociera modalità.

5. Modalità di camminata
Quando lo scooter non è in modalità Park, tenere premuto 🚶 per attivare la modalità di marcia e rilasciare 🚶 per terminare la modalità di marcia.

6. Modalità Parco
Attivare prima la modalità di avviamento a zero. Quando lo scooter è rimasto fermo per 30 secondi, entra automaticamente in modalità Park. Premendo ⚡ , si esce dalla modalità Park.

7.Fari on/off
Premere il ⚡ per 3 secondi per accendere/spegnere i fari.

8. Accensione e spegnimento delle luci ambientali
Premere rapidamente due volte ⚡ per accendere/spegnere le luci ambientali.

9. Commutazione delle luci degli indicatori di direzione
Spingere l'interruttore degli indicatori di direzione verso sinistra per attivare l'indicatore di direzione sinistro e verso destra per attivare l'indicatore di direzione destro. Premere l'interruttore luminoso dell'indicatore di direzione verso il basso per spegnere l'indicatore di direzione.

Indicatore Livello Batteria

81%-100% 61%-80% 41%-60% 21%-40% 0%-20%

Menù nascosto

Quando il display è acceso, premere a lungo ⚡ e 🚶 per accedere al menu nascosto.
Nel menu nascosto, premere brevemente ⏻ per passare da una pagina dei parametri all'altra da P01 a P23. Nella pagina dei parametri, premere ⚡ o 🚶 per aumentare o diminuire il valore.
Per uscire dal menu nascosto, premere a lungo ⚡ e 🚶 . In alternativa, uscirà automaticamente dal menu nascosto dopo 8 secondi di inattività.

P02: Commutazione tra km e miglia. 0 significa km e 1 significa miglio. (Predefinito: 0)
P04: Impostazione del tempo di spegnimento tra 0 e 60 minuti. 0 significa che non dorme mai. (Predefinito: 5 minuti)
P08: Impostazione del limite di velocità tra 5-100. 100 significa 100% della velocità massima. (Predefinito: 100)
P09: Commutazione tra avvio zero e avvio diverso da zero, 0 significa avvio zero e 1 significa avvio diverso da zero. (Predefinito: 1)
P11: Impostazione del livello di forza frenante dell'EABS, da 1 a 5. 0 significa spento, 1 significa il più debole e 5 significa il più forte. (Predefinito: 3)
P12: Impostazione della forza di avvio dolce e forte, da 1 a 5. 1 significa il più morbido e 5 significa il più duro. (Predefinito: 3)
P17: Controllo di crociera. 0 significa che il controllo automatico della velocità è disabilitato e 1 significa che il controllo automatico della velocità è abilitato, il che significa che è possibile utilizzare il controllo automatico della velocità. (Predefinito: 0)

P18: Associare e scollegare la scheda NFC. Premi a lungo il per legare e premi a lungo il per sciogliere.

P19: Regolazione della luminosità della retroilluminazione. Il livello 1 è il più scuro e il livello 3 è il più luminoso. (Predefinito: livello 3)

P23: Modifica della password. Inserire prima la password originale. Per inserire la password, premer o per selezionare il numero della cifra corrente e premere per passare alla cifra successiva. Dopo aver inserito tutte le cifre, premere per 2 secondi finché sul display non appare "S23". Inserire quindi una nuova password di 4 cifre e premere per 2 secondi per salvarla.

Nota: le pagine dei parametri non elencate sopra non sono regolabili.

Tracciamento Errori

Quando il segnale di malfunzionamento viene visualizzato sullo schermo, il numero al centro rappresenta il codice errore. Fai riferimento a questo codice per cercare i problemi e le relative soluzione nella tabella in basso.

Codici Errore	Problema	Soluzione
00	Un guasto è stato trovato o risolto.	1) Riavviare lo scooter.
6	Sottotensione della batteria	1) Caricare completamente la batteria.
7	Guasto al motore	1) Ricollegare il motore e verificare se la spina è collegata correttamente. 2) Sostituire il motore o il cavo motore.
8	Guasto all'acceleratore	1) Ricollegare l'acceleratore. 2) Controllare la molla dell'acceleratore per assicurarsi che sia posizionata correttamente. 3) Sostituire l'acceleratore.
9	Guasto del controller	1) Controllareseipindellaspinadelcontroller sonocollegati correttamente. 2) Sostituire il controller.
10	Errore di ricezione della comunicazione	1) Ricollegare il display LCD. 2) Sostituire lo display o il cavo dello display.
11	Errore di invio della comunicazione	1) Ricollegare il controller. 2) Sostituire il controller o il cavo del controller.

10. Caricabatterie

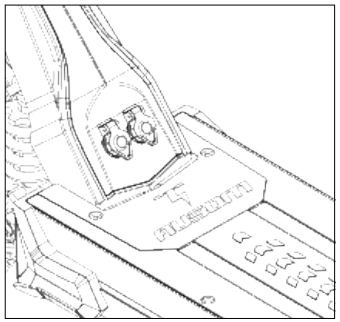

A) La porta di ricarica si trova nella parte anteriore della pedana con un coperchio.

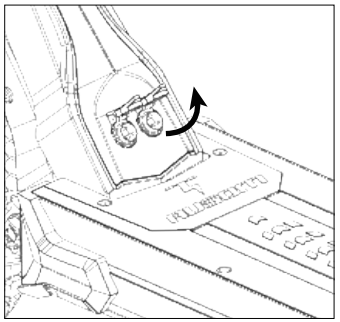

B) Aprire il coperchio.

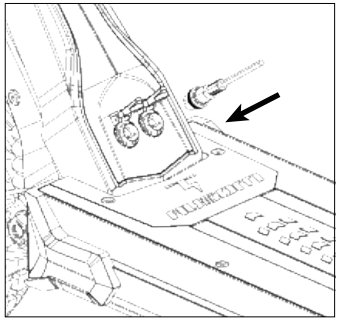

C) Collegare il caricatore e avviare la ricarica.

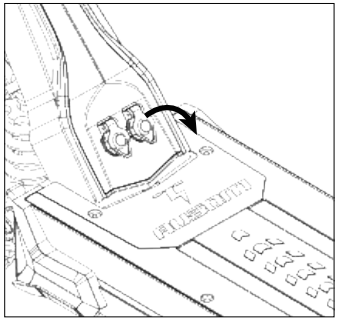

D) Scollegare il caricabatterie al termine della e chiudere il coperchio.

11. Manutenzione

Pulizia

Togli l'alimentazione, disconnetti lo scooter e copri le porte di ricarica prima di pulire il prodotto. Utilizzare un panno morbido e asciutto per pulire il mainframe. Non lavare il tuo e-scooter con alcol, benzina, acetone e altri solventi corrosivi/volatili. Queste sostanze potrebbero danneggiare l'aspetto e la struttura interna dello scooter. Non immergere lo scooter o lavarlo con un'idropulitrice o un tubo per innaffiare.

Conservazione

A) Scooter

1. Non esporre l'e-scooter alla luce solare diretta o alla pioggia per periodi estesi di tempo. Evitare di conservarlo ad alte temperature. È meglio tenerlo in un luogo asciutto e sicuro a una temperatura che oscilli fra i 0°C e i 25°C.